

How to Replace the Nozzle & Foam Pad in the ST-75 Foam Head for Rollover Lance (ST-175)

Step 1.

Unscrew the blue plastic body from the brass inlet. This should only be hand tightened, so shouldn't require a spanner. Ideally do this vertically so that the internal nozzle and 'o' ring don't fall out and get lost.



Step 2.

Replace the nozzle as required by dropping it into the blue housing. The nozzle should seat itself.



Step 3.

Screw the blue head back onto the lance, making sure that the 'O' ring is seated in the brass adaptor (as shown). There is no need to add any thread sealant.

Step 1.

Remove the two retaining pins at the front of the foam nozzle. We recommend you secure the nozzle tightly, before using a blunt narrow tool to remove the pins.



Step 2.

Once the pins have been removed, pull the front section away from the main body



Step 3.

Once the internals have been removed completely, separate the black and blue plastic parts.



Step 4.

The foam pad sits at the end of the black plastic part. Remove the foam pad and replace as required. The ST75 can now be re-assembled.

For the best results, and to improve the longevity of the foam pad, the ST75 foam lance should be flushed through with clean water after every use. This will stop any build up chemical residue blocking the foam pad.