

## Operating Instructions for Easyclean365+ Gun

### 1. Safety indications

- Ensure a risk assessment has been evaluated and implemented.
- Please wear an appropriate ear protection to avoid health harm by the occurrent sound pressure noise.
- Please wear protective goggles to avoid eye injury by swirled up particles. Always use the Easyclean365+ Gun in a well-ventilated work environment.
- Do not use any acidic, alkaline, and/or easily inflammable cleaning agents.
- Always wear appropriate breathing protection to avoid health harm by the sprayed cleaning agent.
- Do not ever point the easyclean365+ Gun at face or body!
- Do not keep the Easyclean365+ Gun within the easy reach of children.
- Check if all connections are solid and if the airlines are intact before using the easyclean365+ Gun.

### 2. Product information and mode of operation.

- The Easyclean365+ Gun is operated with a pressure of 5.5–9 Bar.
- The user can either choose an operation with cleaning agent or exclusively with air.
- The combination of cleaning agent and compressed air bursts the dirt. By means of the inner hose which rotates by 360° the dirt particles are pressed onto the inner surface of the discharge funnel.

### 3. Fields of operation

- Designed for interior and exterior cleaning within the Car Wash range.

### 4. Preparation and the operation of the Easyclean 365+ Gun

- The 1 1 bottle needs to be filled with the desired cleaning agent and fixed at the gun.
- The compressor hose needs to be attached to the inlet of the gun.

- By keeping a distance of approximately 2cm from the surface the gun is started when pressing the lever.
- Using a slow circling motion rotate the gun until the dirt is lifted.
- Abrupt and quick moves are not recommended.
- If the lever is vertical, cleaning agent is used.
- By switching into the operation "exclusively with air" the cleaning agents are removed by the quick rotation of the inner hose and the surface to be cleaned is dried.
- The cleaned spots need to be gently wiped by using a soft cloth.
- After using the nozzle (discharge funnel), rinse with clear water, the dirt particles will easily be removed from the discharge funnel by pressing the lever.

## 5. Maintenance

The Easyclean365+ Gun needs to be completely cleaned after every use. The components which came into contact with the cleaning agents are then rinsed with warm water and any residue removed. The bottle should be detached when being rinsed and then stored at a clean place.

## Technical Specifications

- Working pressure 5.5–9 bar compressed air.
- Compressed air connection ¼".